[FAQ]: How to set Bamboo D700 screen lock/unlock

Lock the touch screen by using the lock icon or password if desired

Note: You should enter the passcode after setting screen is locked.

Set unlocked picture

1. Click **settings**
2. Click **safe**.
3. Click **lock the screen**.
4. Choose **picture** in text setting area.
5. Click next .
6. The unlocked pattern board will pop up. There are nine touch spots. Connect 4 points from vertical, horizontal or diagonal directions. As in Picture 4.10, remove your finger from the screen when you finish. The system will record yous new unlock pattern.
7. Click **continue**.
8. When you see the reminder, enter the unlock pattern, then click **confirm**.

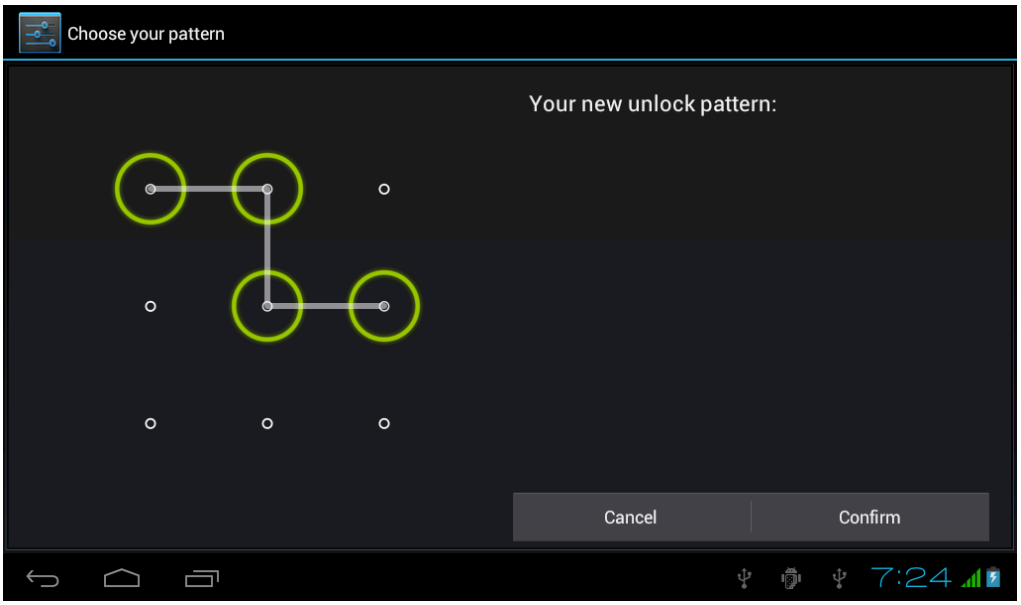

Set unlock PIN code

1. Click **settings**.
2. Click **safe**.
3. Click **screen locked.**
4. Choose **PIN** in text setting area.
5. Enter new PIN code(numbers) and click **continue**.
6. Ener new PIN code again and click **confirm**.

Set unlock password

1. Click **settings**.
2. Click safe.
3. Click screen locked.
4. Set password in text seting area.
5. Set new password(letters and numbers) and then click continue.
6. Enter the password again and the click **confirm.**